

DECORATIVE COLUMN ENDS



WHAT YOU'LL NEED

- Ladera Wall Blocks
- Stakes
- String line
- QUIKRETE® Construction Adhesive
- Heavy Duty Caulk Gun
- Paver Base
- Paver Sand
- Hand Tamp
- Torpedo Level
- Circular Saw with Masonry Blade

ITEM

Greystone	Revere	Granite	Eddington Blend	Charcoal Tan
11023034	11023078.REV	11023057	11023029	11023035

*STONE COLORS VARY BY REGION

How to Build Decorative Column Ends with Ladera



Identify the preferred location for the column end, and prep the foundation. Dig down, so that the first course, along with the foundational substructure, will be buried.



Place and tamp base (if necessary). Level with sand.



Place the first course, and check level.



Apply QUIKRETE® Construction adhesive.




Place the next course of Ladera wall blocks, making sure to stagger bond lines between course 1 and 2. Check level, and repeat to preferred height.





Add a decorative flourish by offsetting one layer of wall block, to create a visual column break. Cut pieces to fill the gaps.



Then, place two Ladera wall blocks, flat edge to flat edge, in parallel.

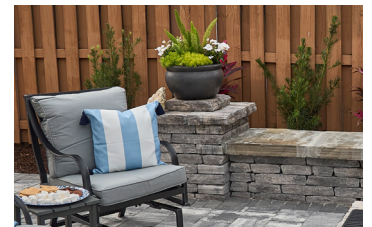

Top with softening greenery or outdoor/solar lighting, and enjoy!

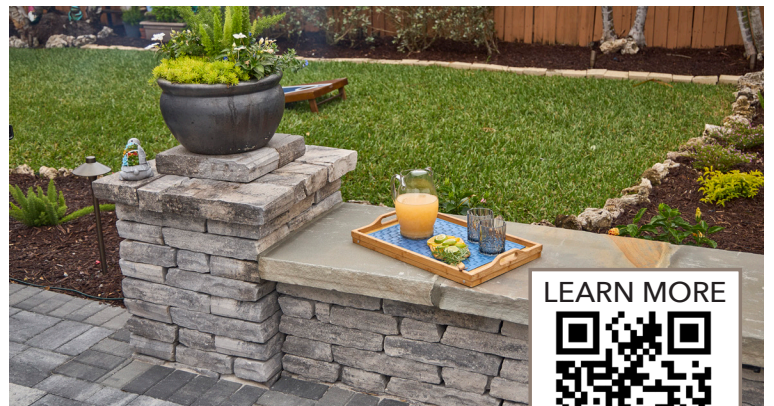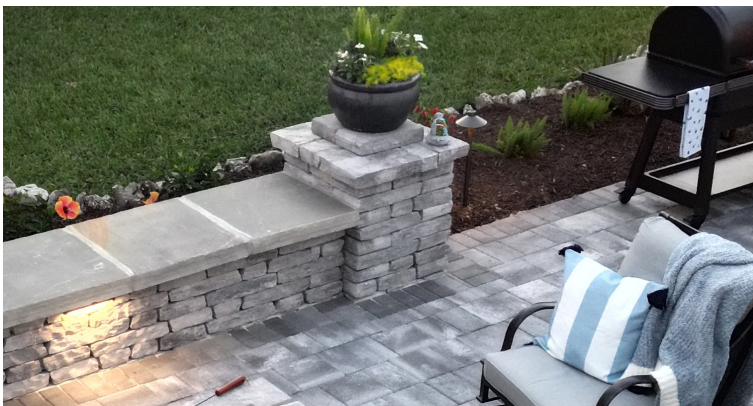

LEARN MORE



 **Submit your project!**
<https://www.pavestone.com/intake>

WARNING: This product can expose you to chemicals, including carbon monoxide, which are known in the State of California to cause birth defects or other reproductive harm. For more information go to: www.P65Warnings.ca.gov.

Español al reverso

TAPAS DECORATIVAS PARA COLUMNAS



LO QUE NECESITARÁ

- Bloques para muro Ladera
- Estacas
- Línea de cuerda
- Adhesivo para construcción QUIKRETE®
- Pistola para calafateo para trabajo pesado
- Base para adoquines
- Arena para adoquines
- Pisón manual
- Nivel torpedo
- Sierra circular con hoja para mampostería

ARTÍCULO

Greystone	Revere	Granite	Eddington Blend	Charcoal Tan
11023034	11023078.REV	11023057	11023029	11023035

*LOS COLORES DE PIEDRA VARIÁN SEGÚN LA REGIÓN

Cómo Construir Topes Decorativos Para Columnas con Ladera



Identifique la ubicación preferida para el tope para columna y prepare los cimientos. Excave hasta que quede enterrada la primera hilada junto con la subestructura de cimentación.



Coloque y apisona la base (si es necesario). Nivele con arena.



Coloque la primera hilada y compruebe el nivel.



Aplique adhesivo para construcción QUIKRETE®.




Coloque la siguiente hilera de bloques para muro Ladera, asegurándose de escalonar las líneas de unión entre la hilera 1 y 2. Compruebe el nivel y repita hasta la altura preferida.




Agregue un toque decorativo desplazando una capa de bloque para muro para crear una separación visual entre columnas. Corte las piezas para llenar los huecos.



Luego, coloque dos bloques para muro Ladera en paralelo, de borde plano a borde plano.

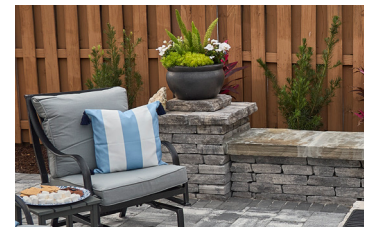

Cubra con vegetación suave o iluminación solar/ exterior, ¡y a disfrutar!

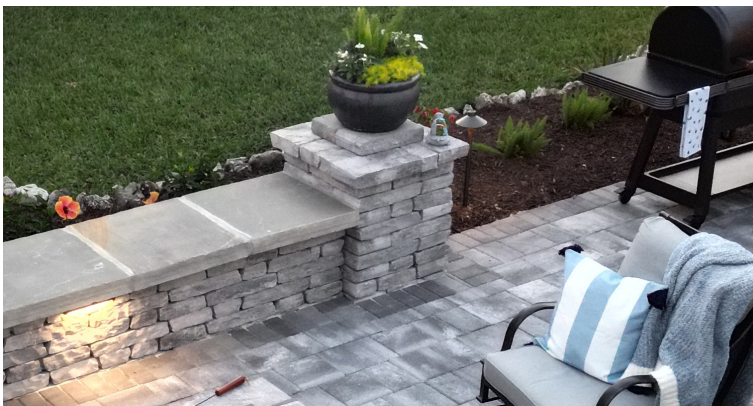

APRENDA MÁS



 ¡Envía tu proyecto!
<https://www.pavestone.com/intake>

ADVERTENCIA: este producto puede exponerlo a sustancias químicas, que incluyen monóxido de carbono, reconocidas por el estado de California como causantes de defectos congénitos u otros daños en el aparato reproductivo. Para obtener más información, visite: www.P65Warnings.ca.gov.

over for English